



REMOTE PROGRAMMING

Linking Lights to Zones:

Within 3 seconds of turning light on, press desired zone number '1 button' 3 times. Once linked, light(s) will flash 3 times.

Cloning Modes:

Within 3 seconds of turning light on, press and hold '1 button' on required channel:

- Channel 1 - PAL
- Channel 2 - Jandy
- Channel 3 - Hayward
- Channel 4 - Pentair
- Channel 5 - Astral

Unlinking from Zones:

Within 3 seconds of turning light on, press the channel zone number's '1 button' that the light is currently linked to 5 times. Light will flash 9 times quickly to confirm it has been unlinked.